

## BCR-6480 Setup Procedures

To setup the 6480 "Slot Reader" for use with TPS, you have two options:

- Use SCANTEAM menu barcodes located in back of your "Programming Menu" Booklet
- or
- Use the Welch-Allyn 3.5" diskette for setup.

### Option 1: Use SCANTEAM barcodes

1. Inside the back cover of the "Programming Menu" booklet are the barcodes necessary to setup the BCR-6480.
2. Make a photocopy of these pages and locate the following 4 barcodes:
  - Enter
  - V
  - A
  - Exit
3. "Very carefully" cut these 4 barcodes out. Ensure that you leave at least a  $\frac{1}{4}$ " edge below the barcode. This is essential for a good scan on the 6480 Slot Reader. Glue these barcodes individually to the bottom edge of four (4) index cards or business cards.
4. If any questions on this, please call: DSN: 734-8332/8362 or (803) 751-8332/8362.
5. Attach the RS-232 cable of the 6480 "Slot Reader" to the RS-232 port on the back of your laptop. Plug in the power source for the 6480 "Slot Reader". Power on your laptop/PC.
6. Slide the barcodes (with the barcode pointing towards the "white label" on top of the 6480 "Slot Reader") in the following sequence "Enter", "V", "A", and "Exit". Ensure that you see a Green Light flash as you slide the barcode through the 6480 Slot Reader. That's it! You've just set up the 6480 "Slot Reader".